

CARE INSTRUCTIONS – EXTERIOR PANELS

Damage occurring to surfaces during transport or installation shall be repaired immediately, and an inspection should be carried out immediately after installation of the parts. All external surfaces shall be inspected annually.

Painted surfaces

If there are blisters, cracks, or if the paint has flaked off, maintenance painting shall be done immediately as follows:

- Wash the surface with a mild alkaline washing liquid.
- Sand away the cracked and loose paint and scrape off any possible resin that may have seeped out.

- Repair possible gaps in, for example, corner joints with elastic sealant.

- Touch up the scraped, clean wood with alkyd primer. Cover the entire surface externally with alkyd or acrylic paint suitable for outdoor painting.

Depending on climate conditions, exposure to sunlight, etc., the surface-treatment is affected differently.

A surface facing south requires more frequent maintenance than surfaces facing north. Do not apply surface-treatment when it is raining or if the wood is damp.